# 070-0300 .375" (9.5mm) Diameter Striker Bolt





Designed as a companion part for use with TriMark's single rotor latches and cage nuts that requires a .375" (9.5mm) diameter striker bolt. It is available in a variety of lengths with several drive details and mounting thread choices.



## **Global Locations:**

### TriMark Corporation

500 Bailey Avenue P.O. Box 350 New Hampton, Iowa 50659 United States Tel: 641-394-3188 Fax: 641-394-2392 1-800-447-0343 www.trimarkcorp.com

### Tri*Mark* Europe

Cedar Court Walker road Bardon Hill Coalville LE67 1TU United Kingdom Tel: +44(0)1530 512460 Fax: +44(0)1530 512461 www.trimarkeu.com

### TriMark (Xuzhou)

Building À5 Jingwu Road Xuzhou Economic Development Zone Xuzhou, Jiangsu 221004 PR China Tel: +86 516 8773 0018 Fax: +86 516 8773 0058 www.trimarkcn.com



5/21-9



## MATERIAL:

- Striker bolt: medium carbon steel, heat treated
- Washer: mild steel

## FINISH:

- Striker bolt: zinc plated with clear chromate
- Washer: galvanized zinc

CAUTION: Product does not meet FMVSS 206 (ECE R11) load requirements.

Individual part dimensions are for reference only. Refer to individual part drawings for complete dimensions, specifications, and installation procedures. Engineering assistance and application drawings are available.

For more information visit www.trimarkcorp.com

# 070-0300 .375" (9.5mm) Diameter Striker Bolt

## LATCH & STRIKER INSTALLATION:

- Install striker bolt in door frame
- Close door carefully and check for interference between head of striker bolt and latch components
- Add or remove shims under striker bolt washer as required (outside diameter of shim should be larger than outside diameter of striker bolt washer)
- Adjust striker bolt vertically so door is not guided upward or downward while being closed
- CHECK TO DETERMINE THAT BOTH SECONDARY AND PRIMARY LATCHING POSITIONS ARE USABLE
- Door should be latched but not "closed" in secondary position and latched to anticipated "closed" position with respect to adjacent surfaces in primary position
- If both primary and secondary positions are not evident, readjust striker bolt
- After installation, check door alignment and door seal pressures



