
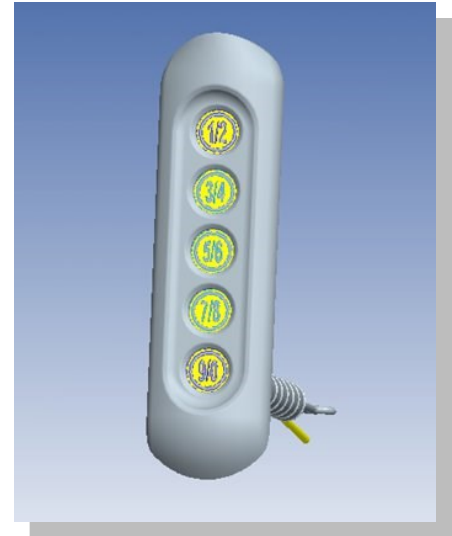


Discrete/CAN communication Configuration on Keypad (22577-xx, 24295-xx, 24296-xx, 29087-xx)

Please note: 38334-xx now replaces 24295-xx

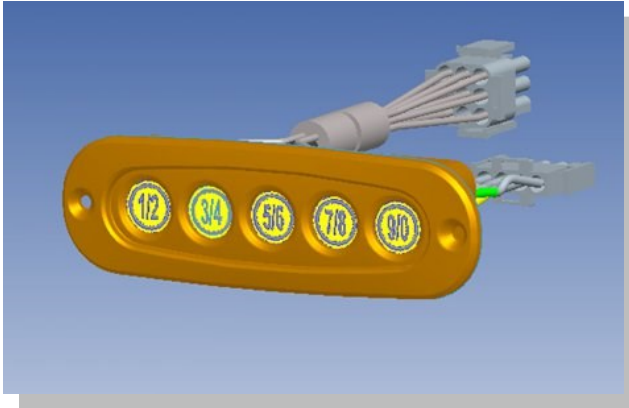

To DISABLE CAN Communications:

1. Disconnect power from the keypad.
2. Connect yellow wire of 9-pin connector (or loose yellow wire if no 9-pin connector is present) to GND (Black).
3. On 4-pin connector, connect WHITE wire to BLACK and GREEN wire to +12V (RED).
4. Provide POWER (Red) and GND (Black) to keypad.
5. Keypad will beep for five (5) seconds and then provide 5 short beeps.
6. Disconnect all wires from power and GND (yellow, red, black, white and green).
7. Reconnect harness and power up keypad normally.

To ENABLE CAN Communications:

1. Disconnect power from the keypad.
2. Connect yellow wire of 9-pin connector (or loose yellow wire if no 9-pin connector is present) to GND (Black).
3. On 4-pin connector: connect WHITE wire to +12V (RED) and GREEN wire to BLACK.
4. Provide POWER (Red) and GND (Black) to keypad.
5. Keypad will beep for five (5) seconds and then provide 2 short beeps.
6. Disconnect all wires from power and GND (yellow, red, black, white and green).
7. Reconnect harness and power up keypad normally.

Global Locations:

TriMark Corporation
500 Bailey Avenue
P.O. Box 350
New Hampton, Iowa 50659
United States
Tel: 641-394-3188
Fax: 641-394-2392
1-800-447-0343
www.trimarkcorp.com

TriMark Europe
Unit 3 Sence Court
Bardon Hill
Coalville
Leicestershire LE67 1GZ
United Kingdom
Tel: +44(0)1530 512460
Fax: +44(0)1530 512461
www.trimarkeu.com

TriMark (Xuzhou)
Building A5 Jingwu Road
Xuzhou Economic
Development Zone
Xuzhou, Jiangsu
221004 PR China
Tel: +86 516 8773 0018
Fax: +86 516 8773 0058
www.trimarkcn.com