530-0100 e-*FOB* Transmitter





DESIGNED FOR:

Replacement components of TriMark's e-ASK systems

INSTALLATION:

- e-*FOB* receiver is easily installed with (2) #6 or M3 screws (not included) and can be mounted in a concealed location
- Standard 12V DC power



Global Locations:

TriMark Corporation

500 Bailey Avenue P.O. Box 350 New Hampton, Iowa 50659 United States Tel: 641-394-3188 Fax: 641-394-2392 1-800-447-0343 www.trimarkcorp.com

Tri*Mark* Europe

Unit 3 Sence Court Bardon Hill Coalville Leicestershire LE67 1GZ United Kingdom Tel: +44(0)1530 512460 Fax: +44(0)1530 512461 www.trimarkeu.com

TriMark (Xuzhou)

Building A5 Jingwu Road Xuzhou Economic Development Zone Xuzhou, Jiangsu 221004 PR China Tel: +86 516 8773 0018 Fax: +86 516 8773 0058 www.trimarkcn.com

TriMark



TriMark Corporation

TriMark Corporation

3/24-11



530-0100 e-*FOB* Transmitter


AVAILABLE:


- Three different programming functions; standard mode, cargo mode and sustained mode. Modes provide customized remote fob transmitter use.
 - Standard mode allows for the lock/unlocking of doors plus panic mode and one auxiliary output (controls lighting, opens compartment etc.).
 - Cargo mode allows for the lock/unlocking of main personnel doors plus independent control of many cargo/compartment doors.
 - Sustained mode allows for the lock/unlocking of doors plus continuous output control with lower buttons pressing.
- 4-button standard and cargo fob, 2-button fob, and wall mount
- Customized graphics possible (buttons and logos please inquire)

Design Patent No. D590,780 / D589,000


Individual part dimensions are for reference only. Refer to individual part drawings for complete dimensions, specifications, and installation procedures. Engineering assistance and application drawings are available.




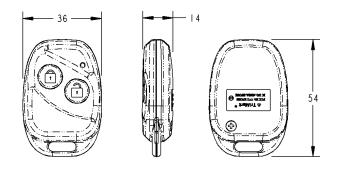

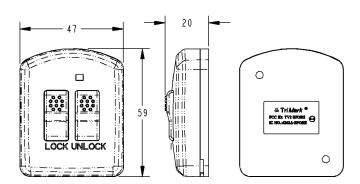

STANDARD





- INGESTION HAZARD: This product contains a button cell or coin battery.
 •DEATH or serious injury can occur if ingested.
 •A swallowed button cell or coin battery can cause Internal Chemical
 Burns in a Slitela as 2 hours.
- Burns in as a tittle as 2 hours. •KEEP new and used batteries OUT OF REACH of CHILDREN •Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



WARNING:

Immediately dispose of used batteries and keep away from children. Do NOT dispose of batteries in household trash.

Even used batteries may cause severe injury or death.

Call a local poison control center for treatment information.